

PARADOX TM40 Touch Screen Keypad



Quick User Guide

Home Screen



To Arm System



Press and hold for 3 seconds (if enabled) or
Press once and release then enter 4 digit arming code.

System will now arm if all zones are closed.

To Disarm System



Press once and release then enter 4 digit dis-arming code.

System will now Dis-arm.

To View Zones




Press once and release



Press home to take you back to home screen

Press 'Open' to see Zone information

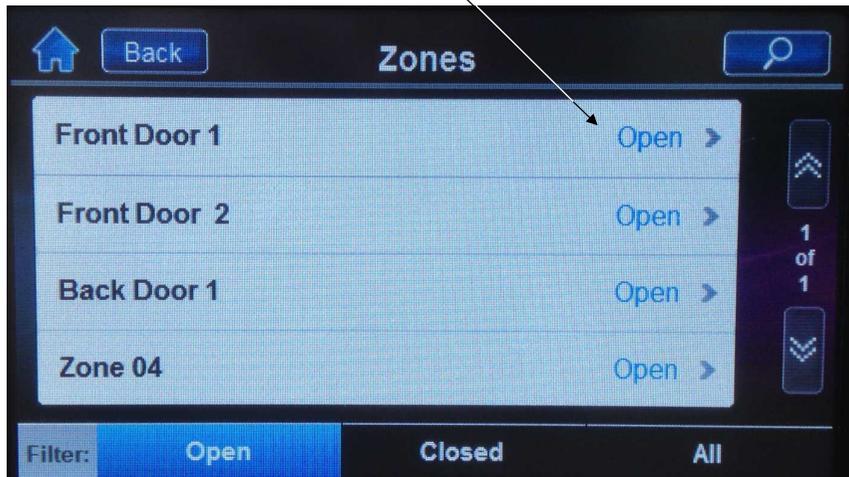

Shows all open Zones

Shows all closed zones

Shows all zones

An open Zone is where the detector, reed etc has not been sealed

(ie: a door is left open, or something is still moving in a room)

To View Troubles



Press once and release




Press home to take you back to home screen

Press to see current Alarms in memory

Press to see any problems with the system

Simply follow the on screen prompts to see what actions required to clear the troubles

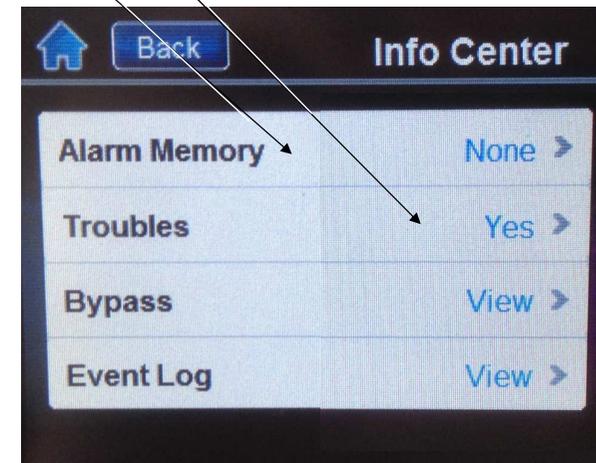

These 2 (alarm memory and troubles) are the most common used. Under troubles it is usually time and date (which can be fixed by pressing the line and setting the time and date).

All other troubles may require a service technician to fix.


To Activate Panics (if enabled)



Press once and release



Press home to take you back to home screen

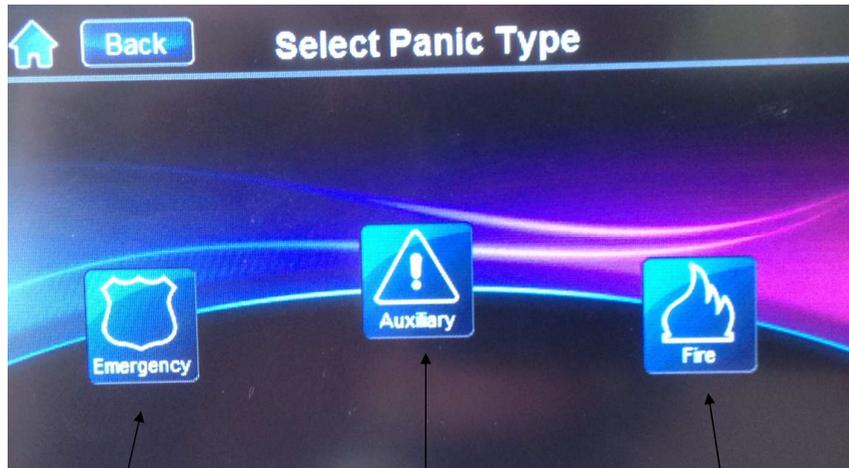

Press once for Police

Ambulance

Fire Service

These 'Panics' are only active if programmed by your installer.

To Clean the Touch Screen



Press once and release



Press home to take you back to home screen

Press the 'Clean Screen' Button



This will then display a countdown clock.

The screen will be disabled till the end of the count down.



Please clean the screen using a soft cloth.

DO NOT use chemicals or solvents to clean it.

A damp (almost dry cloth of with tap water) is suitable for this.

To Adjust screen Brightness



Press once and release




Press home to take you back to home screen

Press the 'Settings button' Button



Then Press 'Screen'

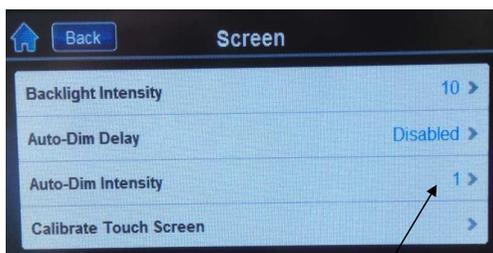

Brightness of screen

Time for auto dim

diabled = no dimming

How dull the auto dim will dull screen down to - (0=off, 1= low)

To Activate Picture Slide Show



Press once and release




Press home to take you back to home screen

Press the 'Settings button' Button



Then Press 'Slide Show'

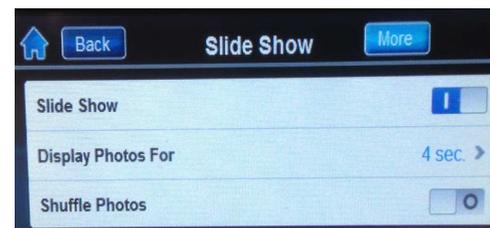

Turns on/off slide show

How long to display picture


Shuffle pictures around

To Add pictures to slide show.


- To remove the memory card from the bottom left of the touch screen, simply push the card in till it clicks then release.




- Place card into SD card adaptor or similar so the card can be read on your computer.

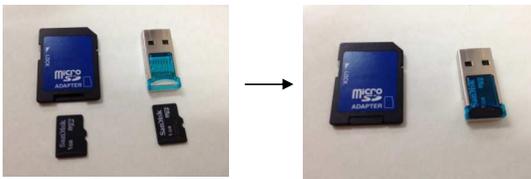



- Insert card into computer (the following relates to a Windows 7 machine) And select 'X' to close window

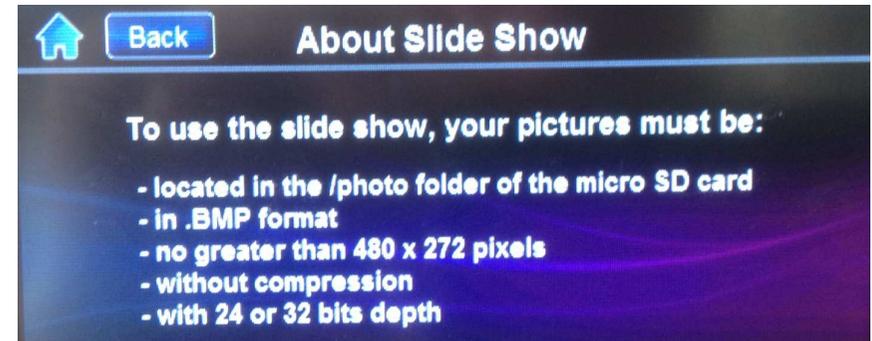

- Locate and Right Click on the image you wish to add to slide show and open with 'PAINT' :

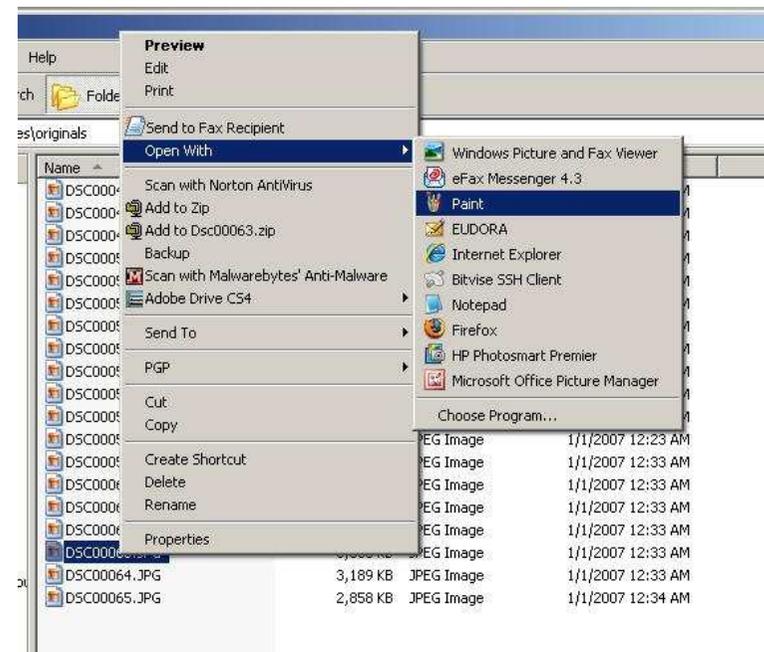

Once opened in paint, Click on the Resize button

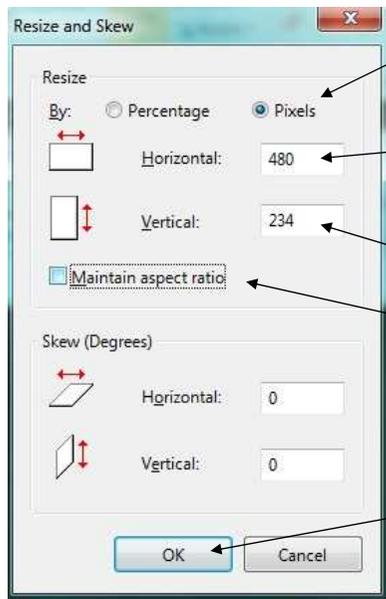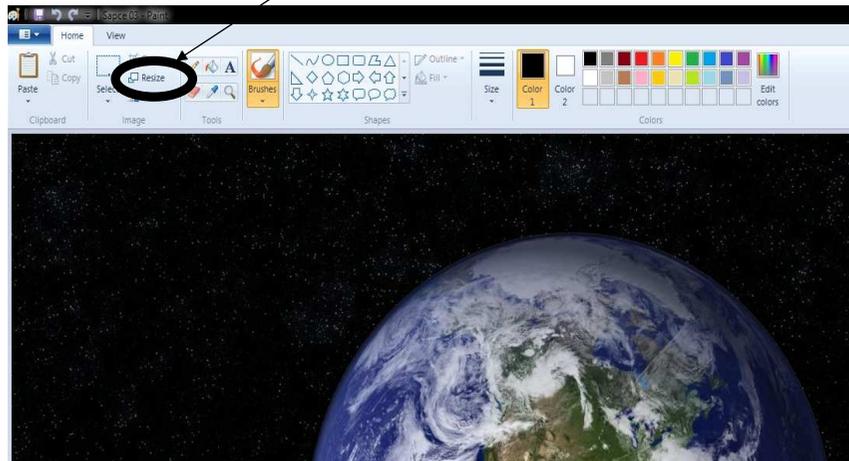

Change setting to Pixels

Change Horizontal to 480

Or


Change vertical to 272

Uncheck maintain ration

Image **can not** be larger than

480 x 272


Then click ok.

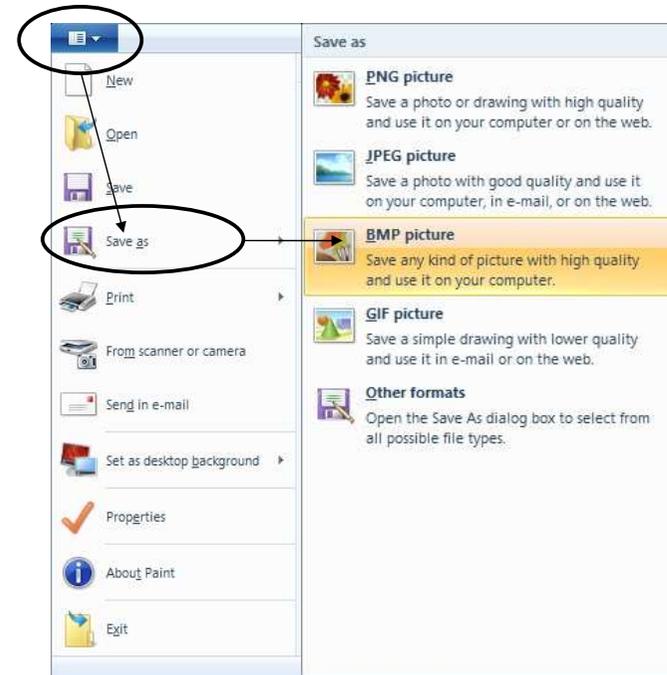


Select 'Save as'

Then select

BMP picture

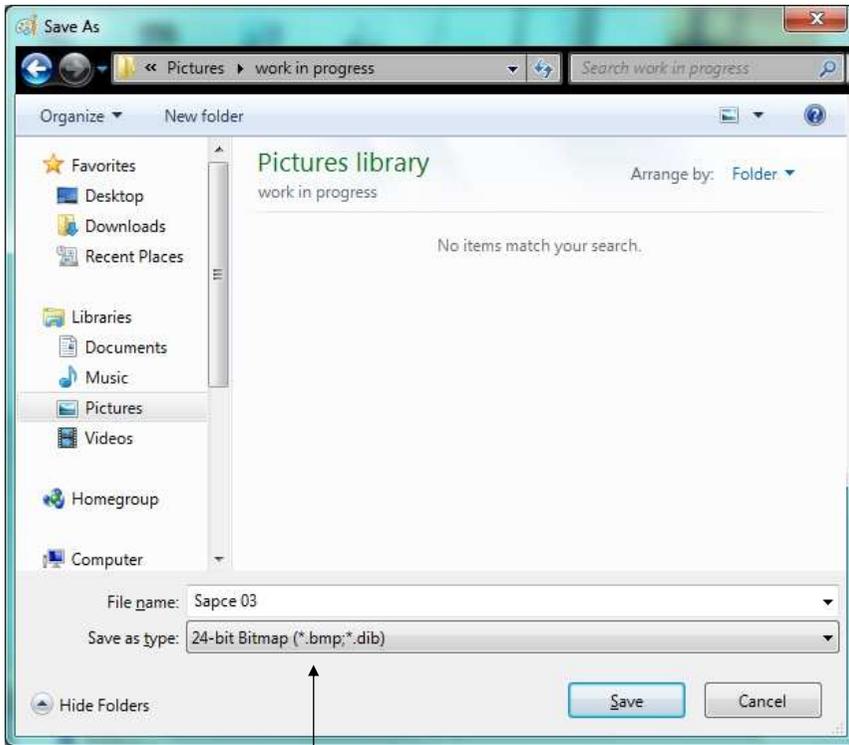

ENSURE type is set to '24-bit Bitmap (*.bmp, *.dib)'

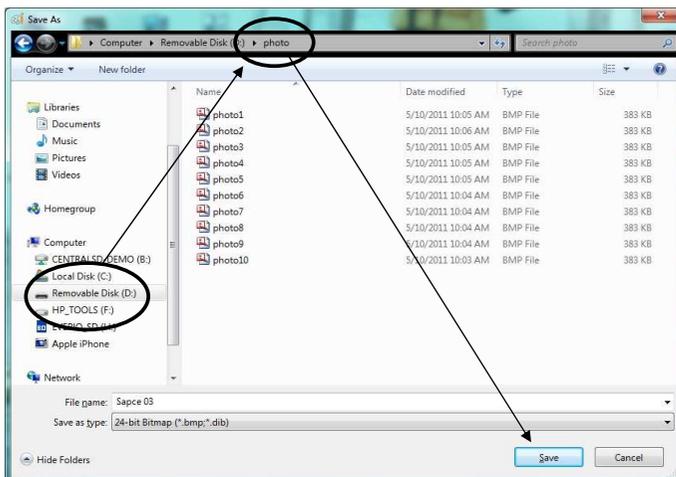

File name does not matter

Then select the memory card drive and then the photo folder then save.

Then Close Paint

Remove memory card and re-insert CAREFULLY back into the touch screen

BE sure to get the card accurately back in the slot and not behind the slot inside the cover though.

Then press  to start slide show manually or wait and it will start automatically



To Change Date & Time.



Press once and release



Press home to take you back to home screen



Then Press
'System Setup'

After which you will
need to enter your
Master Code





Once you have
entered your master
code a new screen will
appear :

Press Time and Date



Re press 'Set Time & Date' line

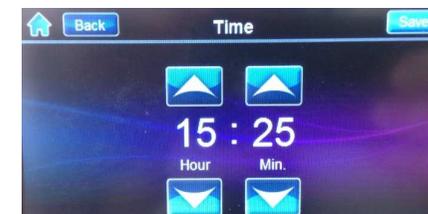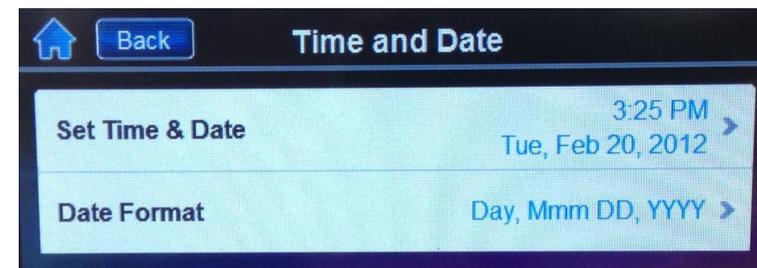


Set time using up and down
arrows then click save in the top
right hand corner of the screen.

Once the date is also set then press the save button in the top right hand corner of the screen. Once this is done then click the home button (top left button that looks like a house)



 To Edit Users



Press once and release



Press home to take you back to home screen




Then Press
'System Setup'

After which you will
need to enter your
Master Code



Once you have entered your master code a new screen will appear :

Press Users

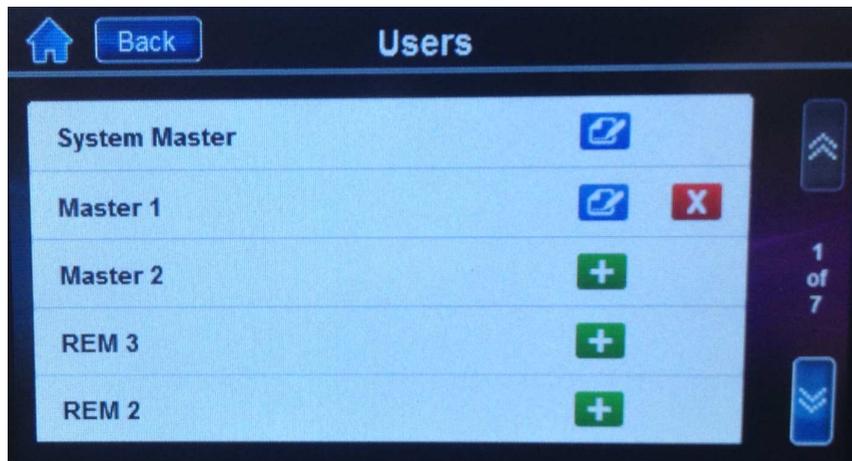

From this screen you can edit codes and remote controls for all users

Press either Down arrows  to select user



Delete user



Add a user



Edit a user

If adding simply enter the 4 digit code then press save

Re-enter 4 digit code to confirm the code and press save

At this point either press Skip or follow screen prompts if you have a remote control to learn in also. (generally press 'SKIP')

To Turn off Fire Alarm

Simply press the OFF button then a new screen will appear



press 'DISARM' bottom right of the screen and put in a user code. If code does not work you can mute the keypad by pressing the 'Mute' button.

This does not acknowledge the alarm but merely silences the keypad.

